



# ALW-Liedgens

## Installation and Operating Instructions

### Multistage Quartz - Waterfilter





# Installation and Operating Instructions

## Installation

The Quartz-Waterfilter which is factory provided completely installed has to be installed vertical at a wall-machine. The filter should be installed as far from the base height that a receptacle can be stored or a hose for waste water derivative can be connected.

The Water supply and derivative should be installed vibrationlessly.

A Pressure gauge would be favourably to recognize a pressure loss trough contamination. The arrow-like rinse lever has to be adjusted in the flow direction. Therefore remove the appropriated Inbus screw M4 first.

## Backrinse

*Short time of backrinse. Backrinse without flow interruption.*

Depending upon water quality a faster contamination is possible and a more frequent back flushing necessary. A contamination can be recognized easily because of the transparency of the filter cup and at the flow pressure loss. To Backrinse adjust the orange colored pivot lever on position "Backrinse" or move in that area back and forth. Adjust the pivot lever in flow direction after the rinse procedure is finished.